



## FILE SHARING MENGGUNAKAN SAMBA


### 1. Membuat dokumen yang akan dibagikan

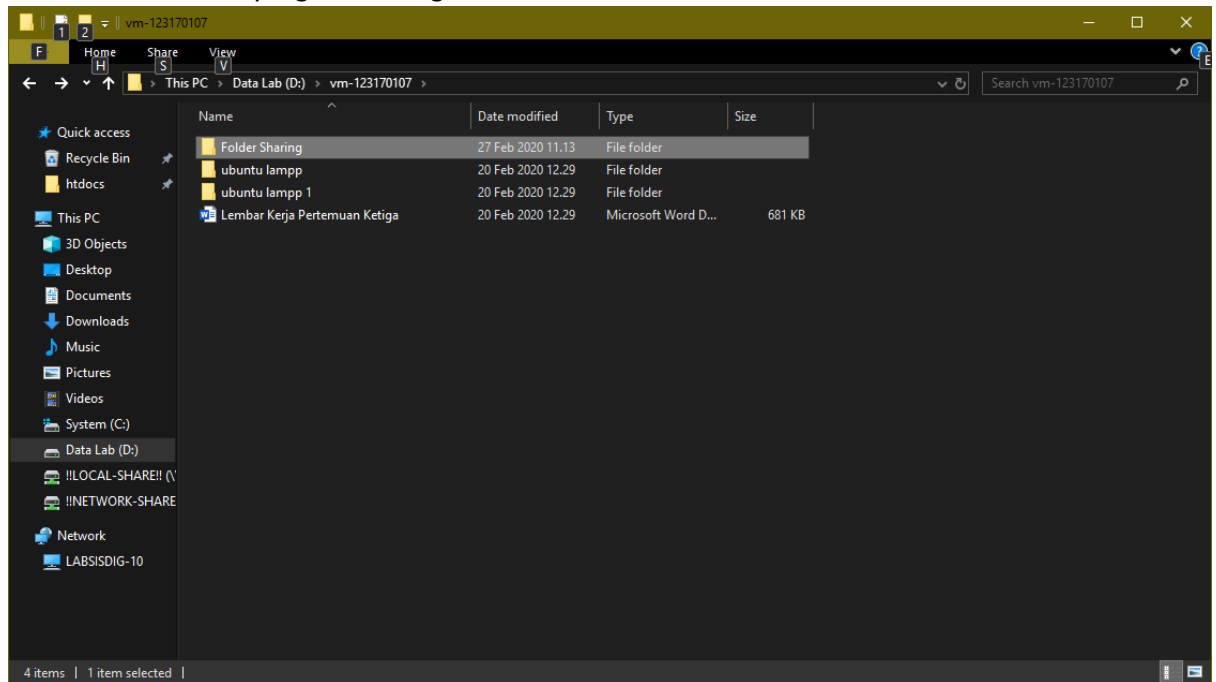


### 2. Buat 5 folder

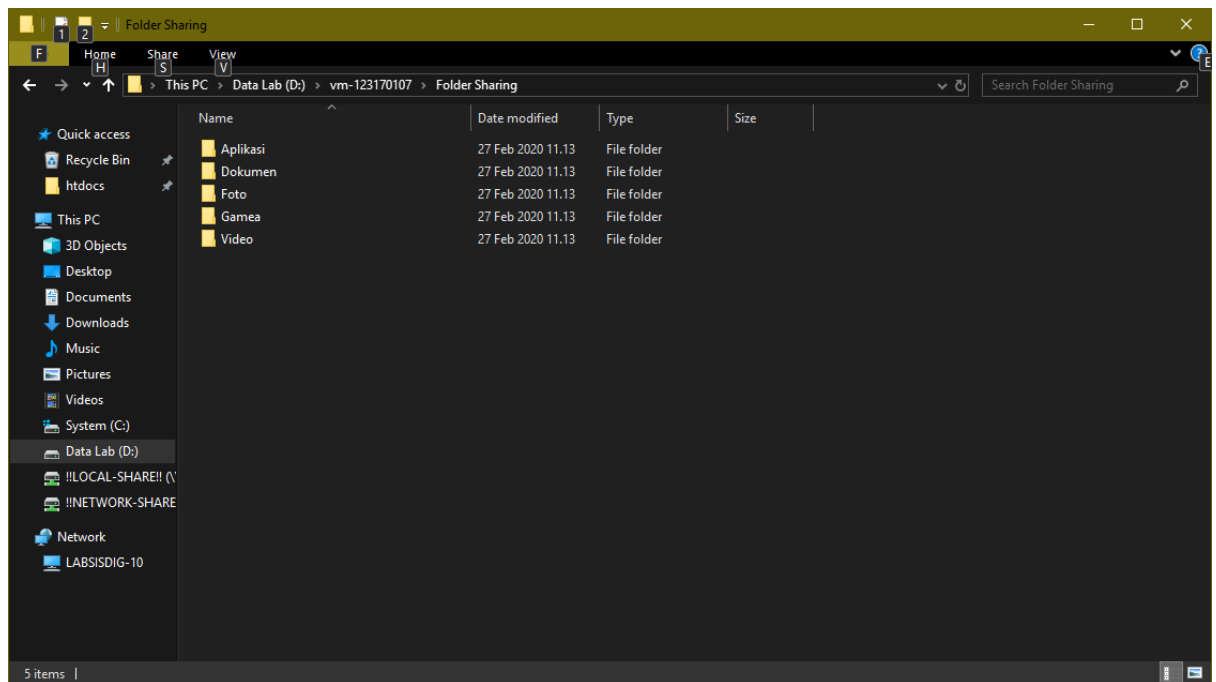


3. Buat text dokumen di dalam folder dokumen berisi nama dan nim

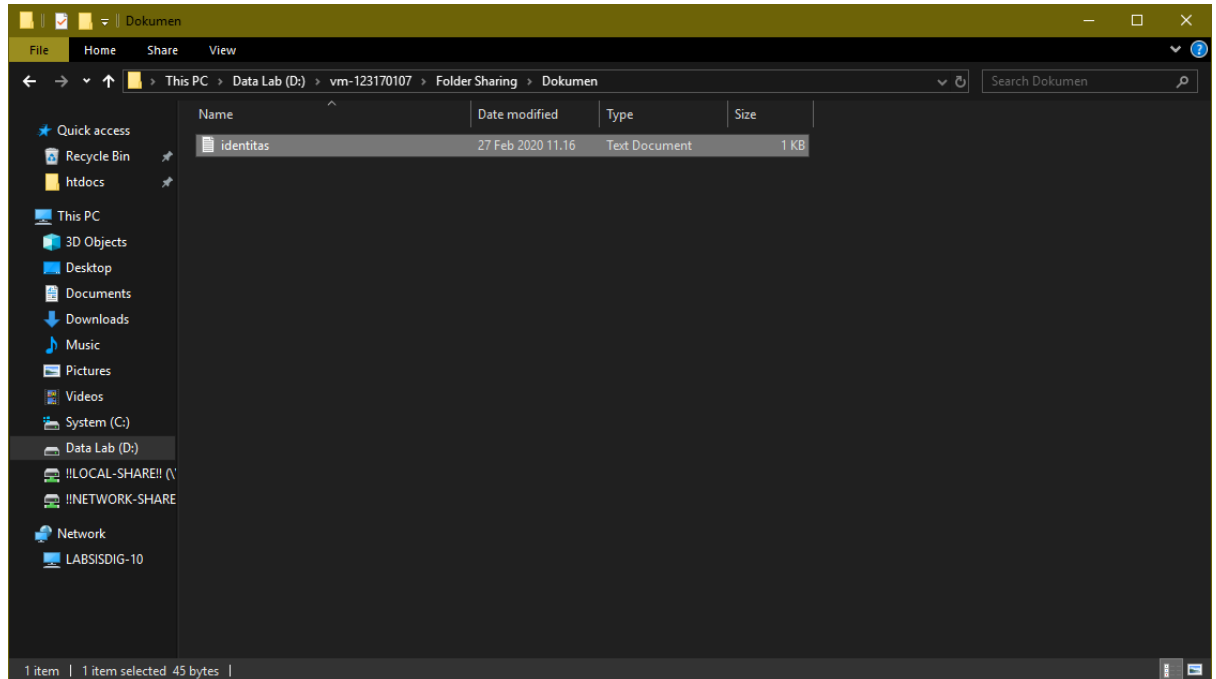

4. Membuat akun baru untuk berbagi berkas  
Open windows+r lalu ketik "netplwiz"

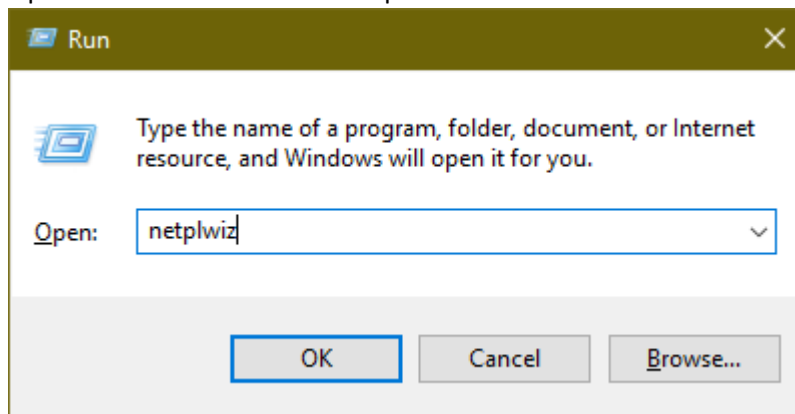

5. Lalu pada cendela user account pilih add

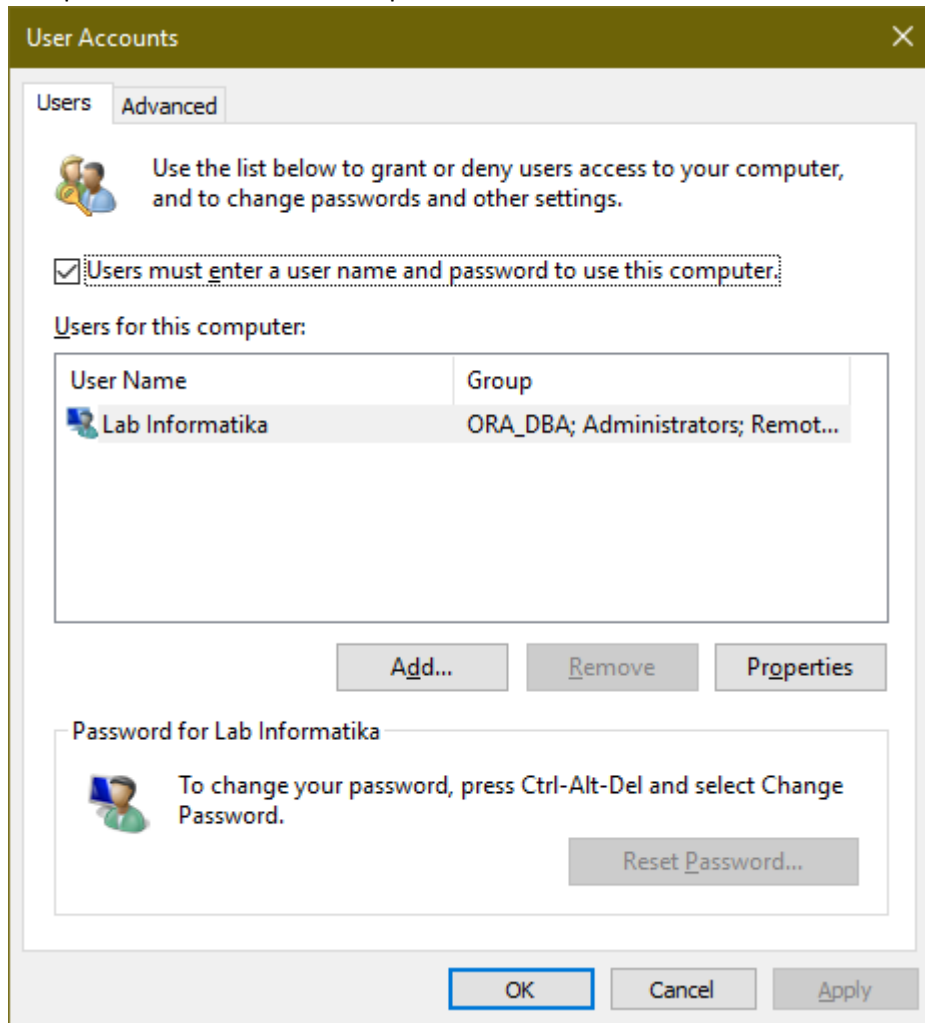

6. Lalu pilih sign in without microsoft account

## How will this person sign in?

What email address would this person like to use to sign in to Windows? (If you know the email address they use to sign in to Microsoft services, enter it here.)

[Sign up for a new email address](#)

This person can sign in to easily get their online email, photos, files, and settings (like browser history and favorites) on all of their devices. They can manage their synced settings at any time.


Privacy statement

Sign in without a Microsoft account (not recommended)


Next

Cancel

7. Lalu pilih local account

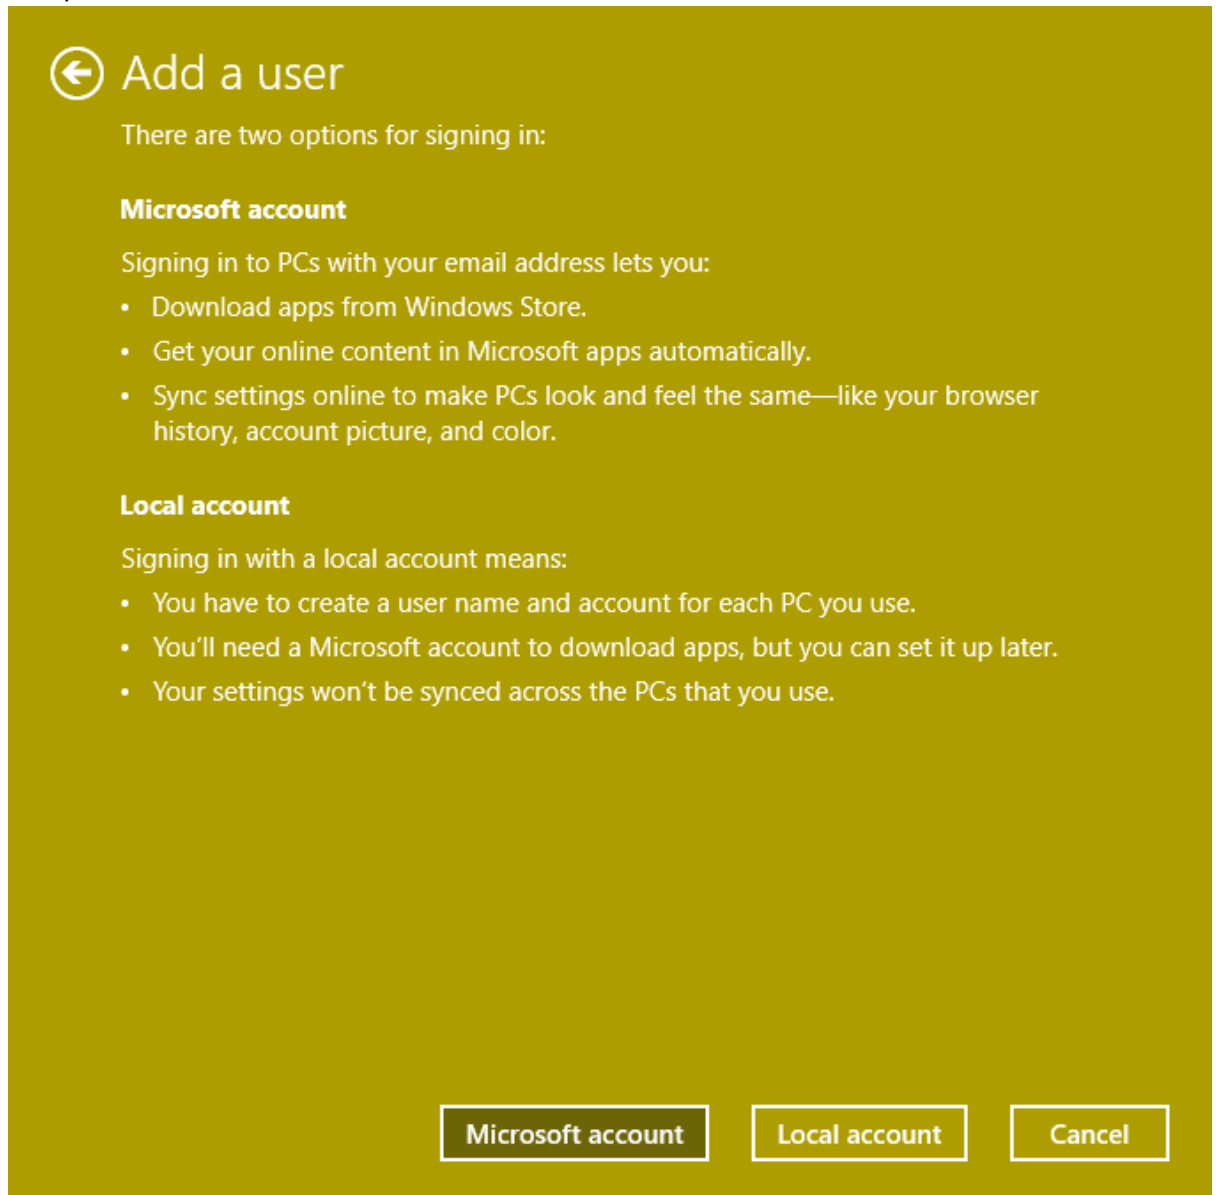

8. Isi kolom username, password, dan password hint




## Add a user


Choose a password that will be easy for you to remember but hard for others to guess. If you forget, we'll show the hint.

User name	<input type="text" value="walbariramanda"/>
Password	<input type="password" value="••••••••"/>
Reenter password	<input type="password" value="••••••••"/>
Password hint	<input type="text" value="nim rama"/>

9. Lalu klik kanan Sharing Folder dan pilih give access ti specific people  
Lalu tulis username kalian dan add

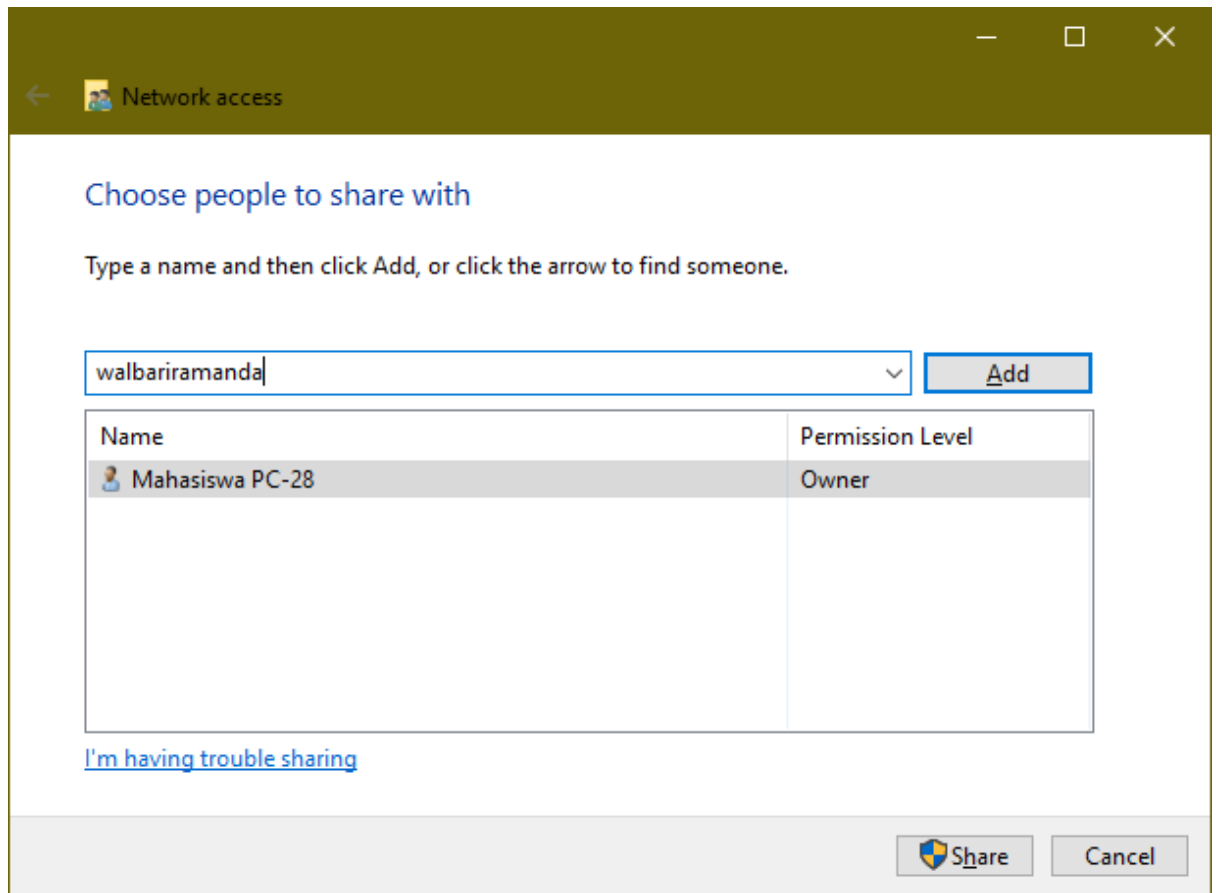


10. Atur permission ke read/write lalu klik share dan done

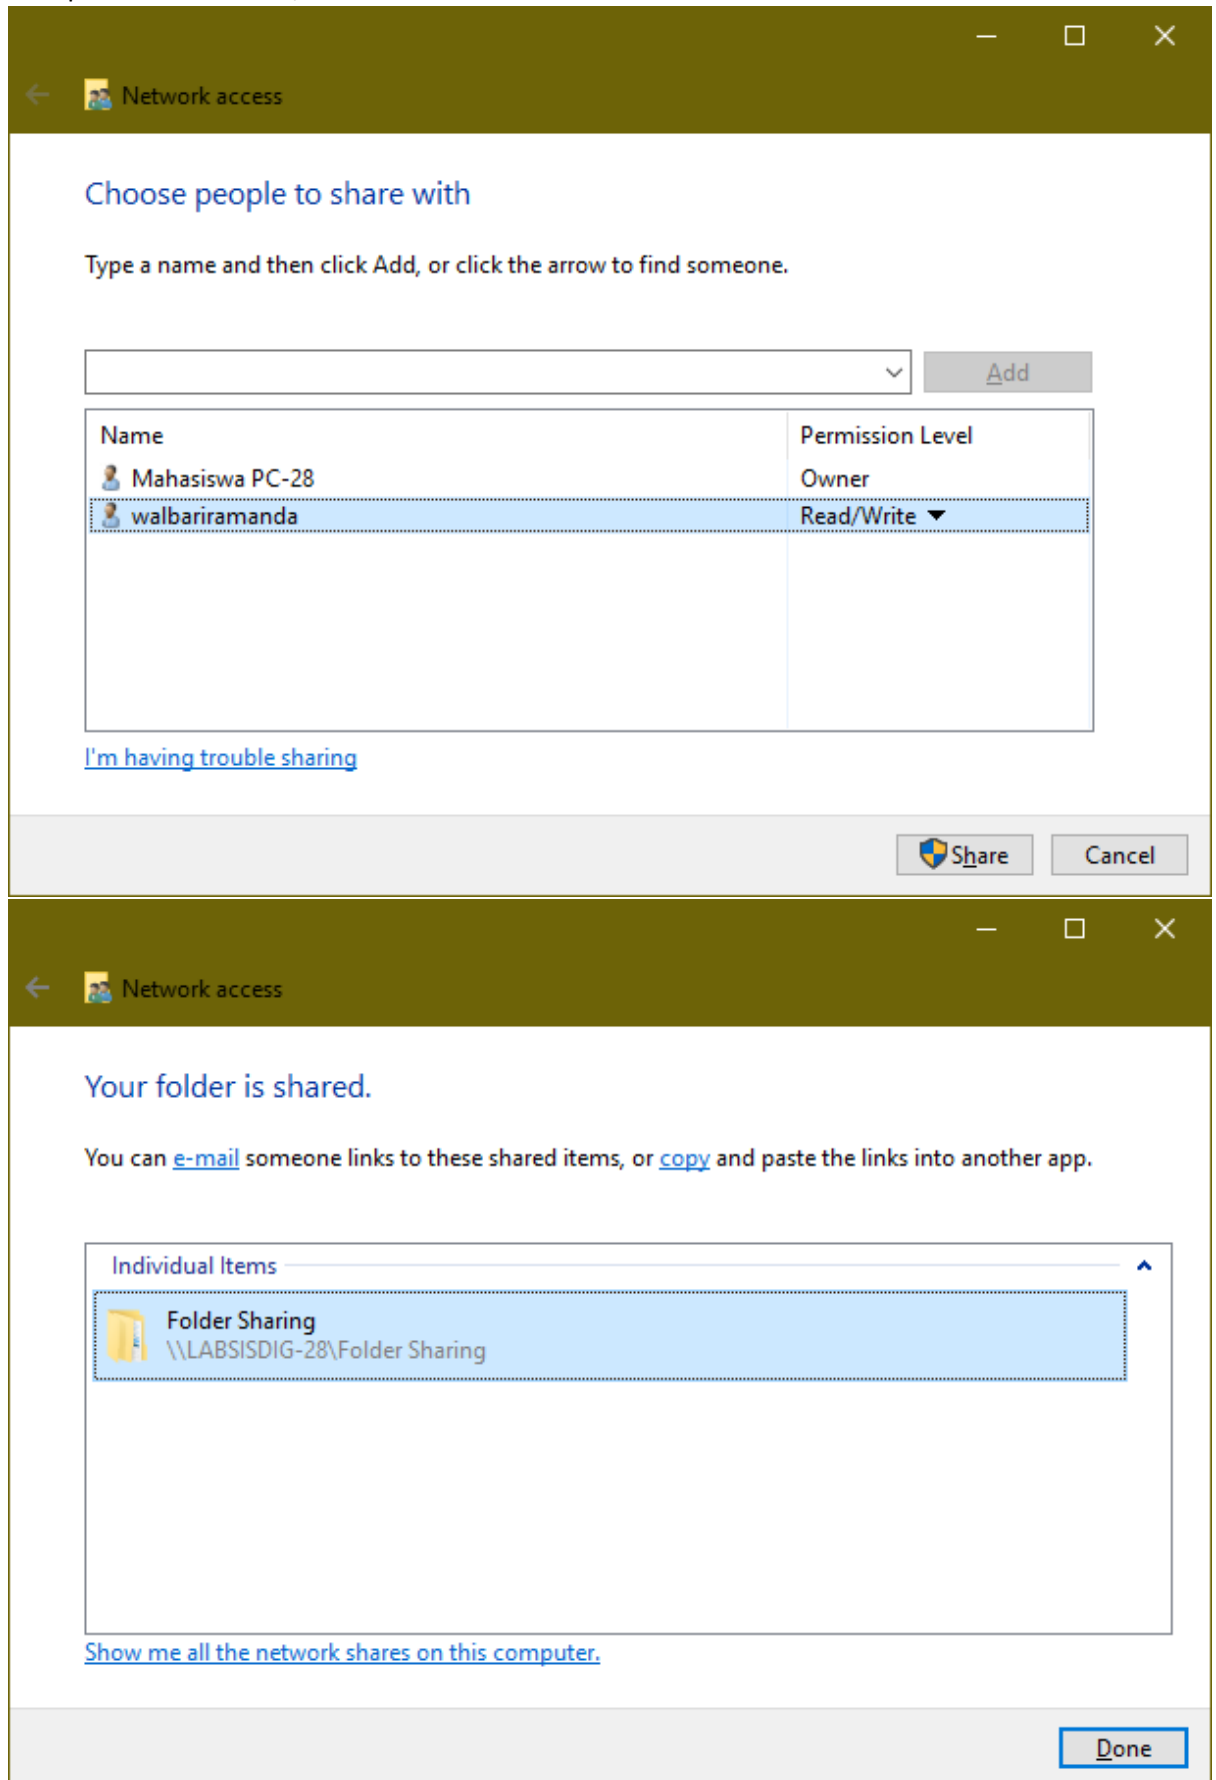




11. Mencoba akses dokumen yang dibagikan  
Klik kanan pada this pc dan pilih “map network drive”  
Lalu isikan [\\LABSISDIG-28\Folder](#) Sharing dan centang semua box lalu finish

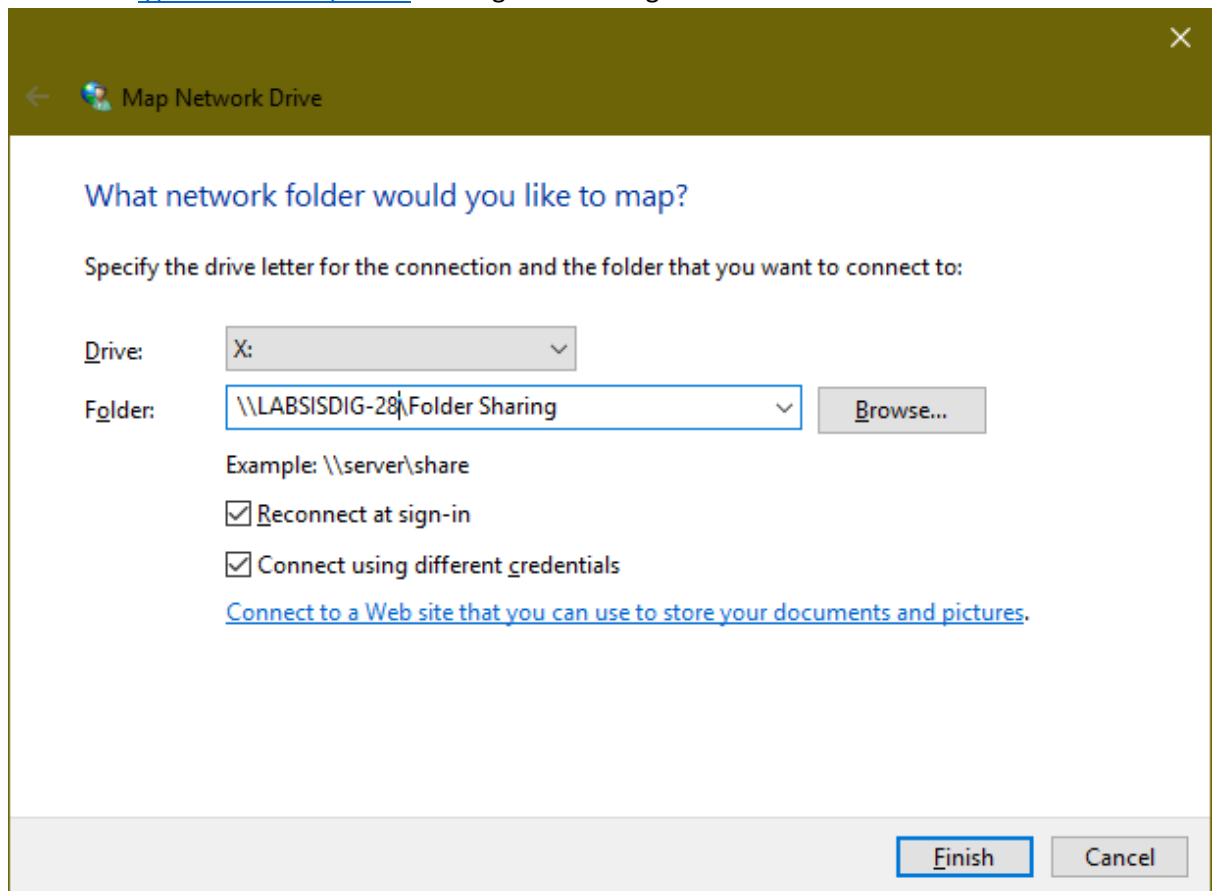


12. Selanjutnya isikan username dan password yang sebelumnya telah dibuat lalu ok

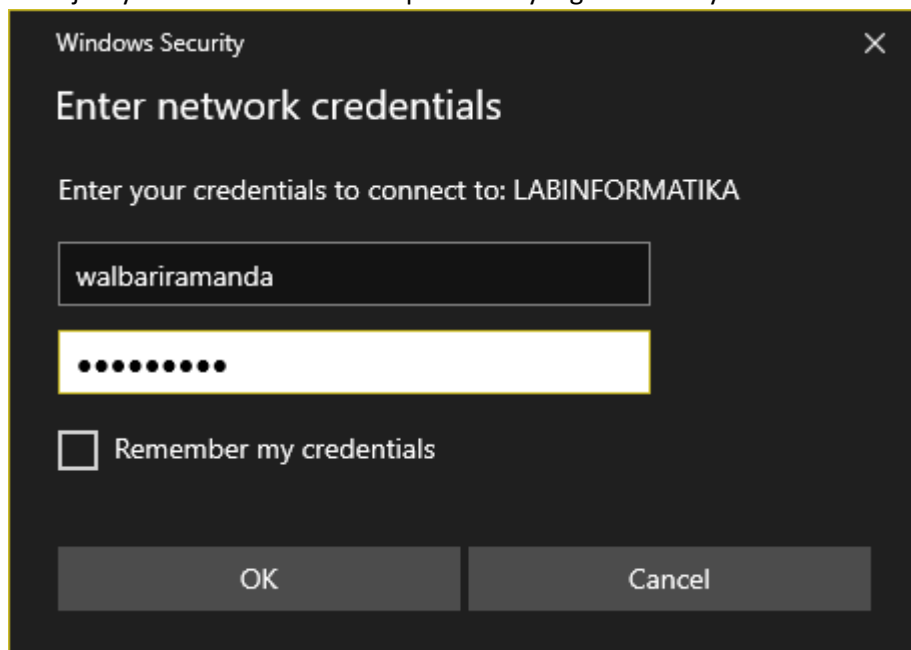


13. Guess access

Ulangi proses sebelumnya dan buat name "everyone" dengan permission level di "read"

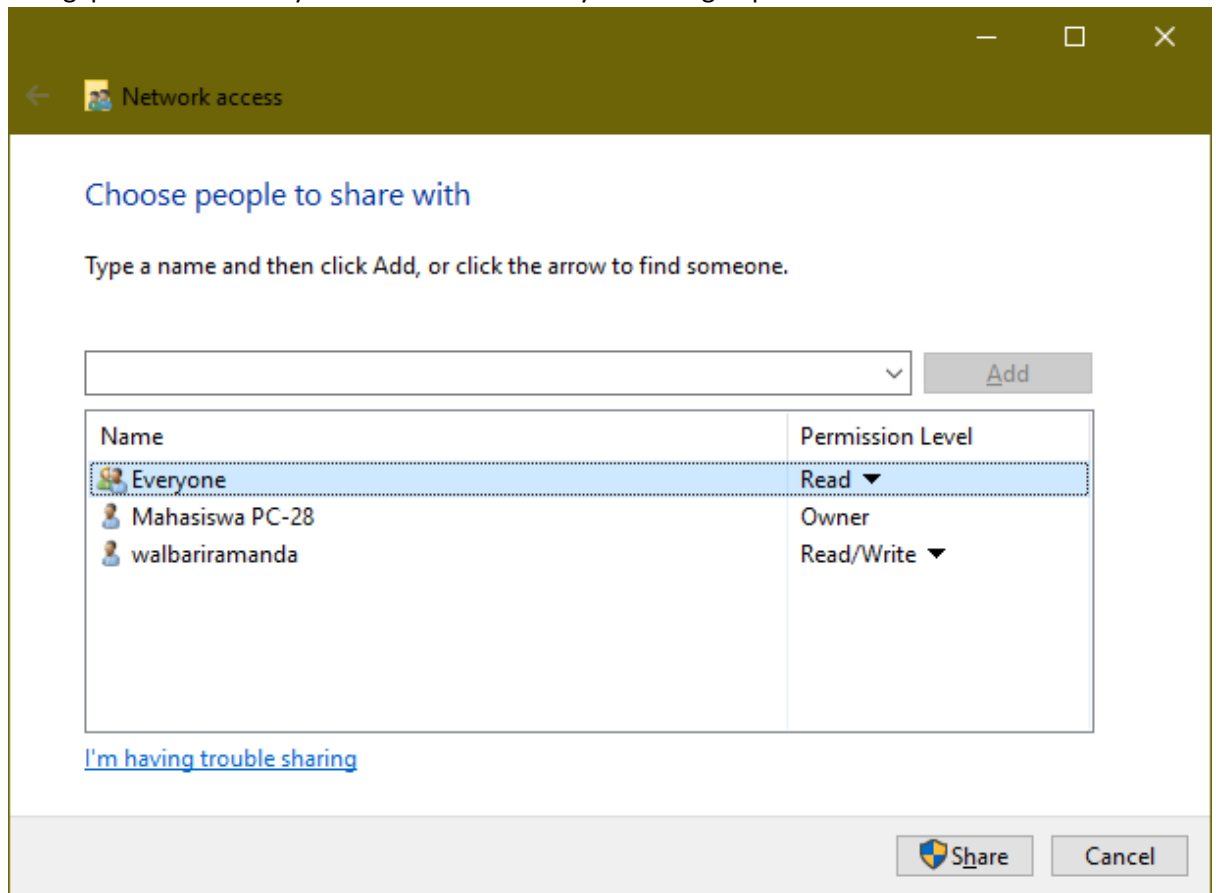

14. Tulis seperti sebelumnya tapi jangan centang "connect using different account"

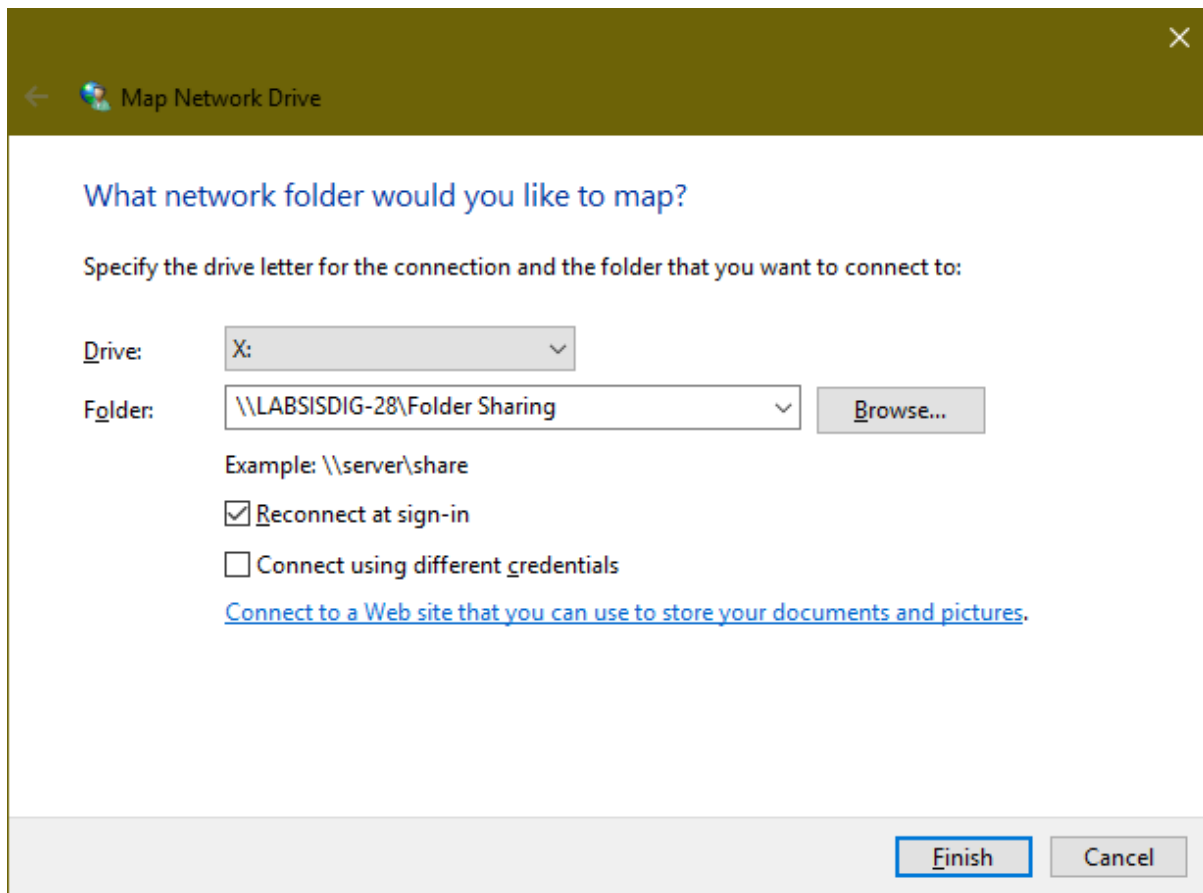

Map Network Drive

What network folder would you like to map?

Specify the drive letter for the connection and the folder that you want to connect to:

Drive: X: ▼

Folder: \\LABSISDIG-28\Folder Sharing ▼ Browse...

Example: \\server\share


☒ Reconnect at sign-in

☐ Connect using different credentials



[Connect to a Web site that you can use to store your documents and pictures.](#)

Finish Cancel


15. Lalu buka properties folder sharing dan pilih security dan advanced

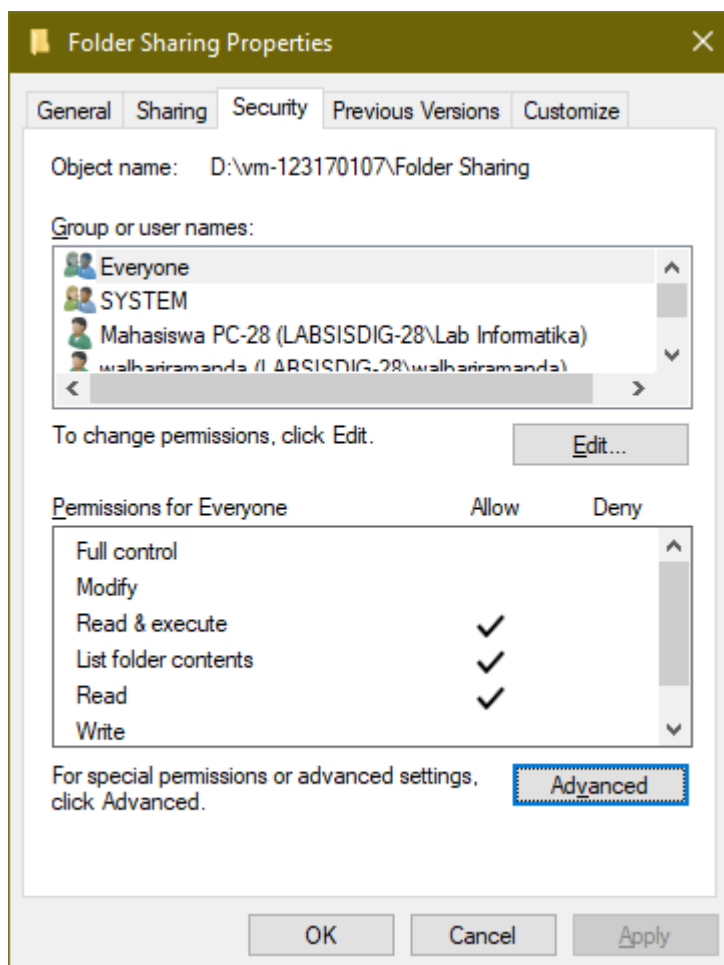

16. Lalu pilih change dan tulis username kalian dan klik chake names

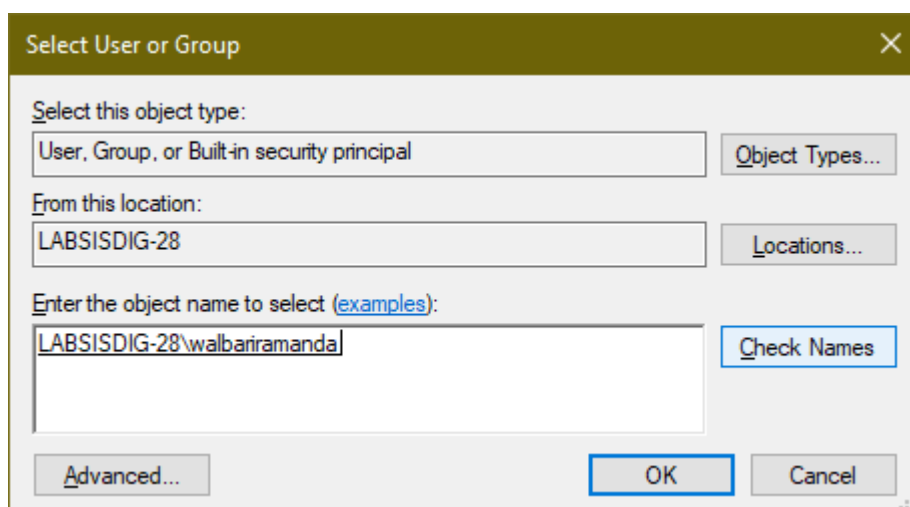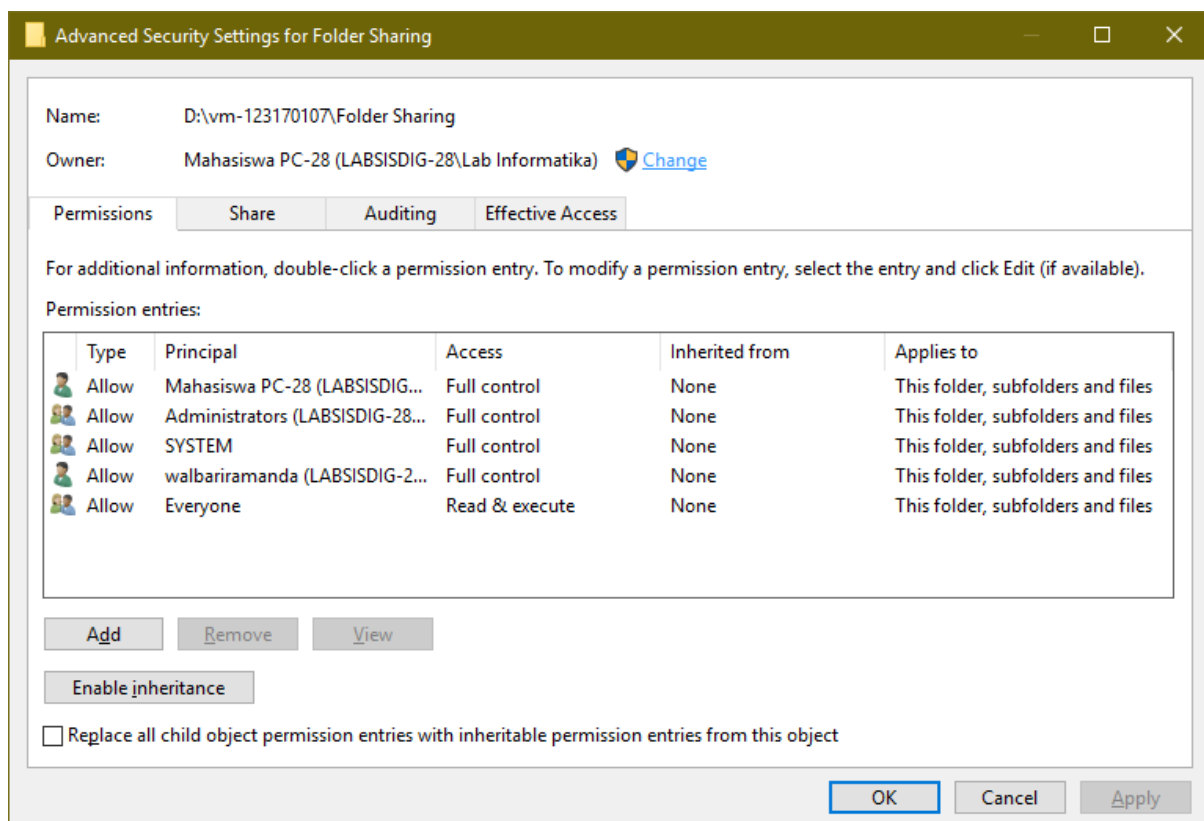


17. Cek folder sharing apakah kita bisa membuat text dokumen atau tidak

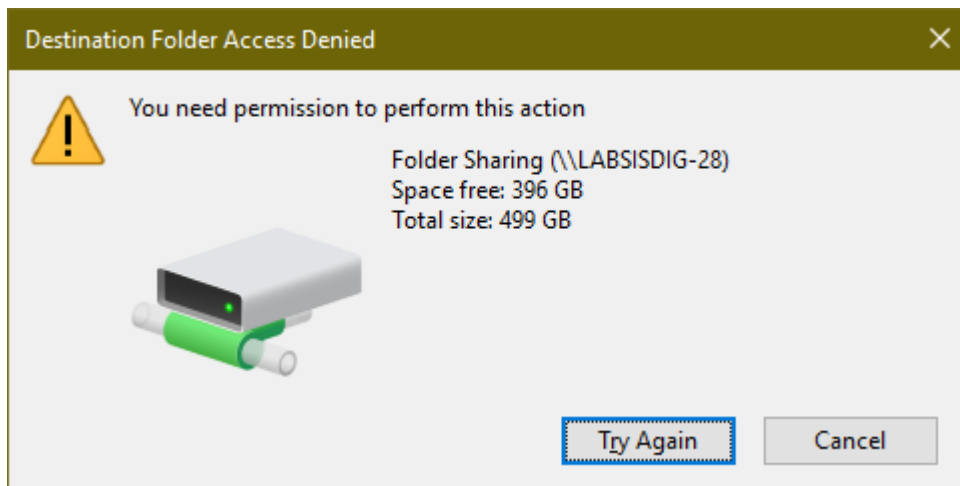

18. Selanjutnya buka c:\windows\system32\drivers\etc\host

Buka dengan notepad dan isikan ip teman kalian dan user mereka sebanyak 3x lalu save

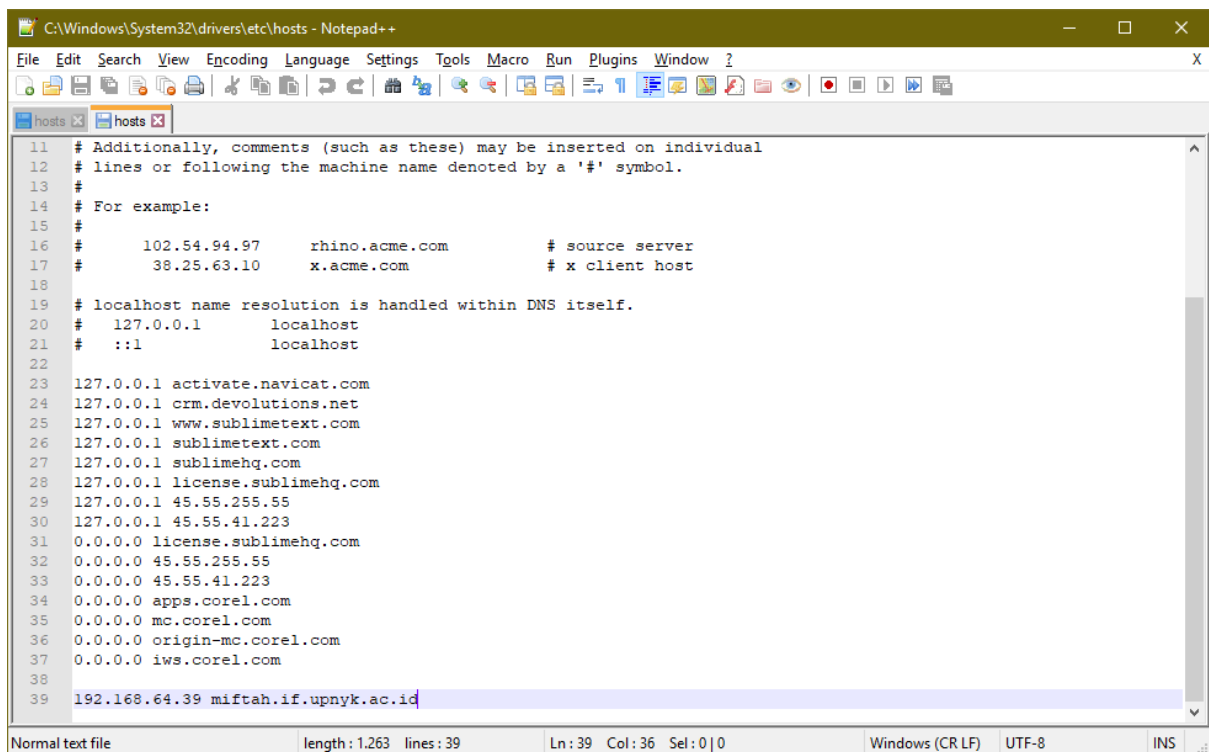

```
11 # Additionally, comments (such as these) may be inserted on individual
12 # lines or following the machine name denoted by a '#' symbol.
13 #
14 # For example:
15 #
16 #       102.54.94.97       rhino.acme.com          # source server
17 #       38.25.63.10       x.acme.com              # x client host
18
19 # localhost name resolution is handled within DNS itself.
20 #   127.0.0.1       localhost
21 #   ::1             localhost
22
23 127.0.0.1 activate.navicat.com
24 127.0.0.1 crm.devolutions.net
25 127.0.0.1 www.sublimetext.com
26 127.0.0.1 sublimetext.com
27 127.0.0.1 sublimehq.com
28 127.0.0.1 license.sublimehq.com
29 127.0.0.1 45.55.255.55
30 127.0.0.1 45.55.41.223
31 0.0.0.0 license.sublimehq.com
32 0.0.0.0 45.55.255.55
33 0.0.0.0 45.55.41.223
34 0.0.0.0 apps.corel.com
35 0.0.0.0 mc.corel.com
36 0.0.0.0 origin-mc.corel.com
37 0.0.0.0 iws.corel.com
38
39 192.168.64.39 miftah.if.upnyk.ac.id
```

19. Lakukan langkah sebelumnya

